


## Hořák PT-100 ruční/Torch PT-100 hand

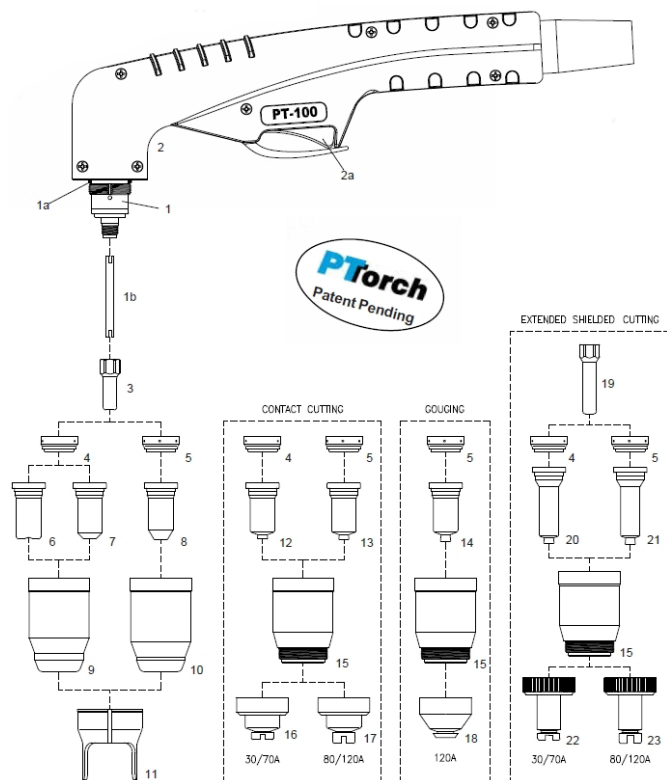

**plynem chlazený / gas cooling**

Zatěžovatel 60% / Duty Cycle 60%

Plyn / Gas

Tlak / Gas pressure

Průtok plynu / Gas Flow

Zapalování / Ignition

100A

Air/N2

4,6-5,0 bar

200 l/min

bez HF / without HF

Poz./Pos.	Kód/Code	Název	Description	ks/pc
	<b>5086</b>	<b>Sada START k hořáku PT-100</b> Sada Start obsahuje tyto díly:	<b>Starting Kit for PT-100 PEGAS</b> Starting Kit includes the following parts:	
3	5012	Elektroda Standard PT-100	Electrode, Back Striking	4
4	5013	Difuzér 30/70A PT-100	Swirl Ring (30/70A)	1
6	5015	Dýza 0,9 30/40 A PT-100	Tip, Contact Cutting, Ø 0.9 (30-40A), Back	2
7	5016	Dýza 1,0 40/50 A PT-100	Tip, Cutting, Ø 1.0 (40-50A), Back Striking	2
8	5019	Dýza 1,4 80/90 A PT-100	Tip, Cutting, Ø 1.4 (80-90A), Back Striking	2
9	5022	Hubice 30/70 A PT-100	Retaining Cap (30/70A)	1
13	5020	Dýza 1,5 100/110 A PT-100	Contact Tip, Ø 1.5 (100-110A), Back Striking	2
15	5033	Hubice kontaktní PT-100	Shield Cup Body	1
19	5037	Elektroda dlouhá PT-100	Extended Electrode	1
21	5041	Dýza 1,4 dlouhá 80/90 A PT-100	Extended Contact Tip, Ø 1.4 (80-90A)	2
23	5045	Hubice dlouhá 80/120 A PT-100	Extended Shield Cap, Hand (80-120A)	1

Poz.	Kód/Code	Název	Description
1	5007	Hlava hořáku PT-100	PT-100 Hand Torch Head
1a	5008	O-kroužek PT-100	O-Ring
1b	5009	Trubička chladič PT-100	Cooling Tube
2a	5011	Vypínač PT-100	Switch
3	5012	Elektroda Standard PT-100	Electrode, Back Striking
4	5013	Difuzér 30/70A PT-100	Swirl Ring (30/70A)
5	5014	Difuzér 80/120A PT-100	Swirl Ring (80/120A and Gouging)
6	5015	Dýza 0,9 30/40 A PT-100	Tip, Contact Cutting, Ø 0.9 (30-40A), Back
7	5016	Dýza 1,0 40/50 A PT-100	Tip, Cutting, Ø 1.0 (40-50A), Back Striking
7	5017	Dýza 1,1 50/60 A PT-100	Tip, Cutting, Ø 1.1 (50-60A), Back Striking
7	5018	Dýza 1,2 60/70 A PT-100	Tip, Cutting, Ø 1.2 (60-70A), Back Striking
8	5019	Dýza 1,4 80/90 A PT-100	Tip, Cutting, Ø 1.4 (80-90A), Back Striking
8	5020	Dýza 1,5 100/110 A PT-100	Tip, Cutting, Ø 1.5 (100-110A), Back Striking
8	5021	Dýza 1,6 110/120 A PT-100	Tip, Cutting, Ø 1.6 (110-120A), Back Striking
9	5022	Hubice 30/70 A PT-100	Retaining Cap (30/70A)
10	5023	Hubice 80/120 A PT-100	Retaining Cap (80/120A)
11	5024	Nástavec vodič PT-100	Double pointed Spacer
12	5026	Dýza 1,0 40/50 A PT-100	Contact Tip, Ø 1.0 (40-50A), Back Striking
12	5027	Dýza 1,1 50/60 A PT-100	Contact Tip, Ø 1.1 (50-60A), Back Striking
12	5028	Dýza 1,2 60/70 A PT-100	Contact Tip, Ø 1.2 (60-70A), Back Striking
13	5020	Dýza 1,5 100/110 A PT-100	Contact Tip, Ø 1.5 (100-110A), Back Striking
13	5029	Dýza 1,4 80/90 A PT-100	Contact Tip, Ø 1.4 (80-90A), Back Striking
13	5031	Dýza 1,6 110/120 A PT-100	Contact Tip, Ø 1.6 (110-120A), Back Striking
14	5032	Dýza drážkovací PT-100	Tip, Gouging (100-120A), Back Striking

Poz.	Kód/Code	Název	Description
15	5033	Hubice kontaktní PT-100	Shield Cup Body
16	5034	Hubice 40/70 A PT-100	Shield Cap, Hand (40-70A)
17	5035	Hubice 80/120 A PT-100	Shield Cap, Hand (80-120A)
18	5036	Hubice drážkovací PT-100	Shield Cap, Gouging
19	5037	Elektroda dlouhá PT-100	Extended Electrode
20	5038	Dýza dlouhá 1,0 40/50 A PT-100	Extended Contact Tip, Ø 1.0 (40-50A)
20	5039	Dýza dlouhá 1,1 50/60 A PT-100	Extended Contact Tip, Ø 1.1 (50-60A)
20	5040	Dýza dlouhá 1,2 60/70 A PT-100	Extended Contact Tip, Ø 1.2 (60-70A)
21	5041	Dýza 1,4 dlouhá 80/90 A PT-100	Extended Contact Tip, Ø 1.4 (80-90A)
21	5042	Dýza 1,5 dlouhá 100/110 A PT-100	Extended Contact Tip, Ø 1.5 (100-110A)
21	5043	Dýza 1,6 dlouhá 110/120 A PT-100	Extended Contact Tip, Ø 1.6 (110-120A)
22	5044	Hubice dlouhá 40/70 A PT-100	Extended Shield Cap, Hand (40-70A)
23	5045	Hubice dlouhá 80/120 A PT-100	Extended Shield Cap, Hand (80-120A)
N/S	5025	Klíč na elektrodu PT-60, 100	Wrench for Electrode
N/S	5046	Kružidlo - sada PT-100	Circle Cutting Attachment